



105 Bonnie Drive  
Butler, PA 16002  
724-283-4681  
724-283-5939 (fax)  
www.bwieagle.com

# PRODUCT INFORMATION BULLETIN

## AIR-EAGLE® SR PLUS 2.4 GHz RF Transmitter MODEL 36-1150

### DESCRIPTION

The AIR-EAGLE SR PLUS TX is a handheld R.F. transmitter capable of sending a unique digital command to the Air-Eagle SR Receiver. The TX and RX combine to create a medium range radio frequency system that operates hazardous or hard-to-reach electrical apparatus from safe, convenient locations of up to 1200 feet away. This transmitter will automatically go into "sleep" mode when not in use to dramatically extend battery life and is designed with a customizable label for each individual customer's application.


### INITIAL SET- UP

This transmitter comes ready to operate, with batteries installed, and factory programmed to Frequency #1. No setup is necessary.

### PROGRAMMING & RELAY OPERATION

By default transmitters are factory programmed to be Model 36-1150 (set to Frequency #1, and to operate Relay #1 in a standard Air-Eagle SR Receiver). If you desire a different frequency or relay operation configuration, you must specify that information upon ordering. You can select a maximum of eight frequencies and eight relays - See example below:

Frequency / Relay Configuration	Part Number for Ordering
Frequency #1 / Relay 1	36-1150
Frequency #1 / Relay 2	36-1150-R2
Frequency #1 / Relay 3	36-1150-R3
Frequency #1 / Relay 4	36-1150-R4
Frequency #1 / Relay 5	36-1150-R5
Frequency #1 / Relay 6	36-1150-R6
Frequency #1 / Relay 7	36-1150-R7
Frequency #1 / Relay 8	36-1150-R8
Frequency #2 / Relay 1	36-1150F2
Frequency #2 / Relay 2	36-1150F2-R2
Frequency #2 / Relay 3	36-1150F2-R3
Frequency #2 / Relay 4	36-1150F2-R4
Frequency #2 / Relay 5	36-1150F2-R5
Frequency #2 / Relay 6	36-1150F2-R6
Frequency #2 / Relay 7	36-1150F2-R7
Frequency #2 / Relay 8	36-1150F2-R8
etc...	

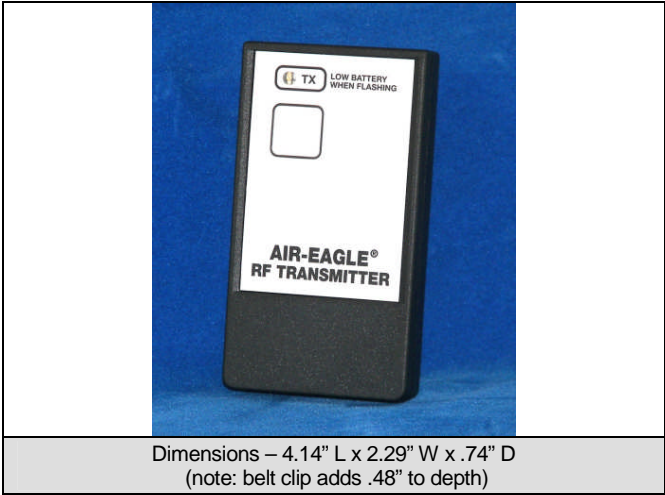

Dimensions – 4.14" L x 2.29" W x .74" D  
(note: belt clip adds .48" to depth)

### CONTROLS & INDICATORS

TX LED	Illuminates continuously while button is depressed and unit is transmitting. When this LED blinks briefly following a transmission, the battery needs to be replaced. See *note under Specifications
Pushbutton	Transmits an individual RF code to the receiver

### SPECIFICATIONS

Keypad	Durable Sealed Membrane Keypad – Eliminates Dust, Dirt and Moisture Failures
Enclosure	ABS Plastic – with IP66 Option
Power Requirements	3.0 VDC
Battery Type	(2) 1.5V lithium each, size AAA , to equal 3.0VDC nominal.
<b>*Note: Current frequency settings are maintained in flash memory during battery replacement. No reprogramming of frequency settings is necessary!</b>	
Battery Life (Active Usage)	Up to 3 months
Battery Life (Sleep Mode)	Up to 1 Year
Transmit Frequency	2.4GHz Spread Spectrum
RF Output Power	60 mW
Transmit Range	Approximately 1200 Feet
Operating Temperature	-40° F to +185° F

# AIR-EAGLE® SR PLUS

2.4 GHz RF Transmitter

**MODEL 36-1150**

## APPROVALS

United States (FCC)	OUR-XBEEPRO
Canada (IC)	4214A-XBEEPRO
Europe (CE)	ETSI

## LIMITED WARRANTY STATEMENT

BWI Eagle Inc. warrants the Air-Eagle Remote Control System, if properly used and installed, will be free from defects in material and workmanship for a period of 1 year after date of purchase. Said warranty to include the repair or replacement of defective equipment. This warranty does not cover damage due to external causes, including accident, problems with electrical power, usage not in accordance with product instructions, misuse, neglect, alteration, repair, improper installation, or improper testing. This limited warranty, and any implied warranties that may exist under state law, apply only to the original purchaser of the equipment, and last only for as long as such purchaser continues to own the equipment. This warranty replaces all other warranties, express or implied including, but not limited to, the implied warranties or merchantability and fitness for a particular purpose. BWI Eagle makes no express warranties beyond those stated here. BWI disclaims without limitation, implied warranties of merchantability and fitness for a particular purpose. Some jurisdictions do not allow the exclusion of implied warranties so this limitation may not apply to you. To obtain warranty service, contact BWI Eagle for a return material authorization. When returning equipment to BWI Eagle, the customer assumes the risk of damage or loss during shipping and is responsible for the shipping costs incurred.

---

DOCUMENT DATE: 25-Jul-11 / REV.5

---



105 Bonnie Drive  
Butler, PA 16002  
(724) 283-4681  
Fax (724) 283-5939  
[www.bwieagle.com](http://www.bwieagle.com)