



105 Bonnie Drive
Butler, PA 16002
724-283-4681
724-283-5939 (fax)
www.bwieagle.com

PRODUCT INFORMATION BULLETIN

AIR-EAGLE® SR PLUS 2.4 GHz RF Stop/Start Transmitter MODEL 36-6200-1B-DC

DESCRIPTION

The AIR-EAGLE SR PLUS RF STOP/START TRANSMITTER IS designed to transmit a stop or start signal to any Air-Eagle SR Receiver located up to 1200 feet away. This model comes equipped with a latching "STOP" pushbutton, a momentary "START" pushbutton and two high current SPDT relay outputs. The local relay outputs can be wired to activate local annunciators, etc. The Air-Eagle SR PLUS Transmitter is user-programmable for up to eight network frequencies to allow multiple transceivers to operate simultaneously in the same area and utilizes spread-spectrum technology and provides the utmost security and reliability even in the noisiest RF environments.

APPROVALS

United States (FCC)	OUR-XBEEPRO
Canada (IC)	4214A-XBEEPRO
Europe (CE)	ETSI

INSTALLATION

DISCONNECT DC Power from all equipment before installation.

1. Mount the AIR-EAGLE SR TRANSMITTER in a convenient location.
2. Install antenna. The unit has an antenna connector located on the right side on the enclosure. Attach the supplied portable antenna to this connector.
3. Connect DC power and control to the proper terminals in your control circuit.


TERMINAL STRIP WIRING

1	"STOP" Switch Input C	5	N/O Relay #1	11	(-) 9-36VDC INPUT
2	"STOP" Switch Input N/O	6	C Relay #1	12	(+) 9-36VDC INPUT
3	"START" Switch Input C	7	N/C Relay #1		
4	"START" Switch Input N/O	8	N/O Relay #2		
		9	C Relay #2		
		10	N/C Relay #2		



Dimensions (with mounting plate) 6.3" L x 4.8" W x 4.3" H

CONTROLS AND INDICATORS

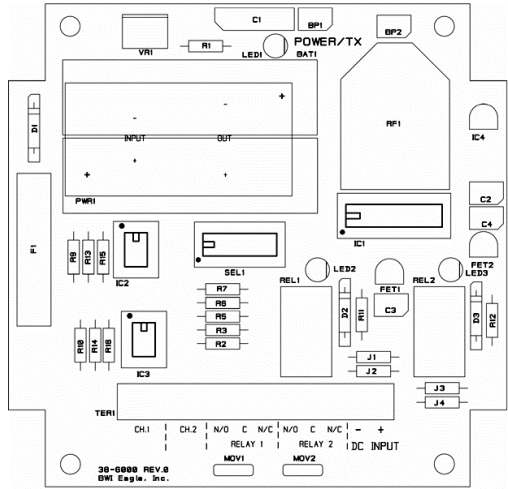

LED1	Power / TX LED
LED2	Illuminates when Local Relay #1 is energized
LED3	Illuminates when Local Relay #2 is energized
"STOP" Pushbutton Input	Transmits STOP signal to Relay #1 in the remote receiver
"START" Pushbutton Input	Transmits START signal to Relay #2 in the remote receiver
RF1	RF module that receives data from the remote transmitter
REL1	Energized while "STOP" pushbutton is activated
REL2	Energized while "START" pushbutton is activated
SEL1	Seven dip switches for selecting configuration options and operating frequency

AIR-EAGLE[®] SR PLUS

2.4 GHz RF Stop/Start Transmitter

MODEL 36-6200-1B-DC

FREQUENCY SET-UP

The unit is shipped from the factory with SEL1 switches in the open positions. The relays will operate as maintained momentary and unit is receiving commands on frequency one. If you wish to change the default frequency setting, follow the instructions on the table below.

- 1) Remove power from unit
- 2) Remove top cover.
- 3) Select desired address and/or network frequency using table below.
- 4) Reattach cover and apply power.
- 5) Programming is now complete.

OTHER				
SEL1 (SW1-3)	Reserved for future use			
FREQUENCY SET-UP				
SEL1 (SW4-6)	Network Address	SW4	SW5	SW6
	1	OPEN	OPEN	OPEN
	2	CLOSED	OPEN	OPEN
	3	OPEN	CLOSED	OPEN
	4	CLOSED	CLOSED	OPEN
	5	OPEN	OPEN	CLOSED
	6	CLOSED	OPEN	CLOSED
	7	OPEN	CLOSED	CLOSED
8	CLOSED	CLOSED	CLOSED	
OTHER				
SEL1 (SW7)	Reserved for future use			

SPECIFICATIONS

DC Input	9 – 36 VDC @ 10 Watts
Relay Contacts	SPDT 5 amp @ 120VAC or 50VDC
Fuse Protected	1 amp
Transceiver Frequency	2.4 GHz Spread Spectrum
RF Output Power	60 mW
Transceiver Range	Approximately 1200 feet
Transceiver Channels	8 Independent Network Frequencies
Antenna Connection	TNC Bulkhead
Operating Temperature	-40° F to +185° F
Enclosure	ABS Plastic, NEMA 3, 3R, 4, 4X, 12, 13
Weight	Approx 2 lbs.

REPLACEMENT PARTS & ACCESSORIES

PC Board (Main)	36-6202-1B-DC
Standard Antenna (Included):	
2.4GHz TNC Portable Antenna	49-1201
Optional Antennas and Accessories – Used to increase range in both non line of sight and line of sight applications. - Contact BWI Eagle for recommendations	
2.4GHz Thru-Hole Mount Mobile Antenna	49-2201
2.4GHz Magnetic Mount Mobile Antenna	49-2202
2.4GHz Omni Directional Antenna	49-3201
2.4GHz 13dB Yagi Antenna	49-3202
Flex Coax Cable w/Connectors – Connects external antenna(s) to base unit(s).	49-4000-XX (XX = # of Feet)
Inline Lightning Arrestor	49-5002
* = Line of Sight	

LIMITED WARRANTY STATEMENT

BWI Eagle Inc. warrants the Air-Eagle Remote Control System, if properly used and installed, will be free from defects in material and workmanship for a period of 1 year after date of purchase. Said warranty to include the repair or replacement of defective equipment. This warranty does not cover damage due to external causes, including accident, problems with electrical power, usage not in accordance with product instructions, misuse, neglect, alteration, repair, improper installation, or improper testing. This limited warranty, and any implied warranties that may exist under state law, apply only to the original purchaser of the equipment, and last only for as long as such purchaser continues to own the equipment. This warranty replaces all other warranties, express or implied including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. BWI Eagle makes no express warranties beyond those stated here. BWI disclaims without limitation, implied warranties of merchantability and fitness for a particular purpose. Some jurisdictions do not allow the exclusion of implied warranties so this limitation may not apply to you. To obtain warranty service, contact BWI Eagle for a return material authorization. When returning equipment to BWI Eagle, the customer assumes the risk of damage or loss during shipping and is responsible for the shipping costs incurred.

DOCUMENT DATE: 21-Feb-12 / REV.6



105 Bonnie Drive
Butler, PA 16002
(724) 283-4681
Fax (724) 283-5939
www.bwieagle.com