



105 Bonnie Drive
Butler, PA 16002
724-283-4681
724-283-5939 (fax)
www.bwieagle.com

PRODUCT INFORMATION BULLETIN

AIR-EAGLE® XLT 900 MHz RF Transceiver MODEL 44-4000N4W-120VAC

DESCRIPTION

The AIR-EAGLE XLT RF TRANSCEIVER IS a four I/O unit designed to transmit and receive unique signals from an identical unit located up to 2500 feet (or more) away. This model comes equipped with four contact inputs and four high current SPDT relay outputs. This allows the user to not only transmit information out, but receive a confirming signal back that the operation was performed. The Air-Eagle XLT TRX is user-programmable for up to 128 digital addresses and seven network frequencies to allow multiple transceivers to operate simultaneously in the same area and utilizes spread-spectrum technology and provides the utmost security and reliability even in the noisiest RF environments. A terminal strip has been provided for interfacing with external dry contact inputs as well as dry contact relay outputs. This unit can operate remote machinery such as pumps, gates, chutes etc.

INSTALLATION

DISCONNECT AC Power from all equipment before installation.


1. Mount the AIR-EAGLE XLT TRANSCEIVER in a convenient location.
2. Install antenna. The unit has an antenna connector located on the right side on the enclosure. Attach the supplied portable antenna to this connector.
3. Connect AC power and control to the proper terminals in your control circuit.

TERMINAL STRIP WIRING – BOTTOM PCB

1	N/O Relay #1	7	N/O Relay #3	13	120 VAC - (Neutral)
2	C Relay #1	8	C Relay #3	14	120 VAC - (Hot)
3	N/C Relay #1	9	N/C Relay #3		
4	N/O Relay #2	10	N/O Relay #4		
5	C Relay #2	11	C Relay #4		
6	N/C Relay #2	12	N/C Relay #4		

TERMINAL STRIP WIRING –TOP PCB

1	C Input #1	7	C Input #4
2	N/O Input #1	8	N/O Input #4
3	C Input #2	9	Not Used
4	N/O Input #2	10	Not Used
5	C Input #3		
6	N/O Input #3		

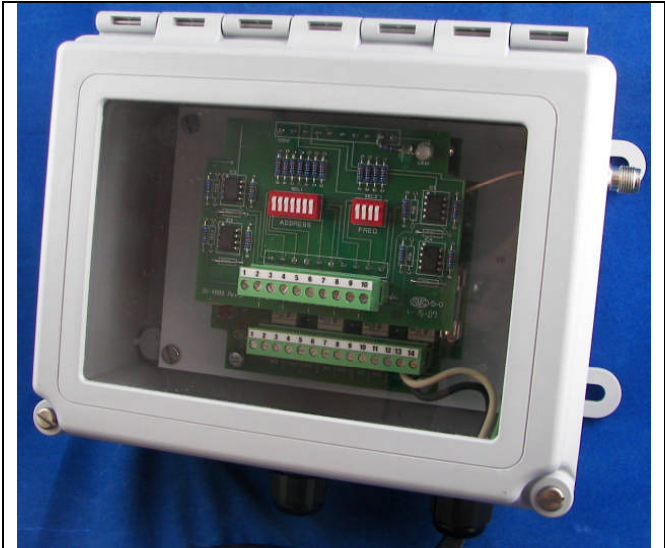

Dimensions (overall) 8" X 6" 4" Mounting Feet (9" x 4")

DIGITAL ADDRESS & FREQUENCY SET-UP

This transceiver is factory programmed to Frequency #1 and Digital Address "0". These settings can be changed by the user in any combination **but must match its corresponding transceiver.**

- 1) Remove power from unit
- 2) Remove top cover.
- 3) Select desired address and/or network frequency using table below.
- 4) Reattach cover and apply power.
- 5) Programming is now complete.



SEL1 (ADDRESS)	Seven dip switches for selecting digital address of this transmitter (Maximum of 128 combinations)			
SEL 2 (SW 1-3): (NETWORK FREQUENCY)	Network Address	SW1	SW2	SW3
	1	OPEN	OPEN	OPEN
	2	CLOSED	OPEN	OPEN
	3	OPEN	CLOSED	OPEN
	4	CLOSED	CLOSED	OPEN
	5	OPEN	OPEN	CLOSED
	6	CLOSED	OPEN	CLOSED
	7	OPEN	CLOSED	CLOSED
	OPEN	CLOSED		
SEL2 (SW4)	Reserved for future use			

AIR-EAGLE® XLT

900 MHz RF Transceiver

MODEL 44-4000-120VAC

CONTROLS AND INDICATORS

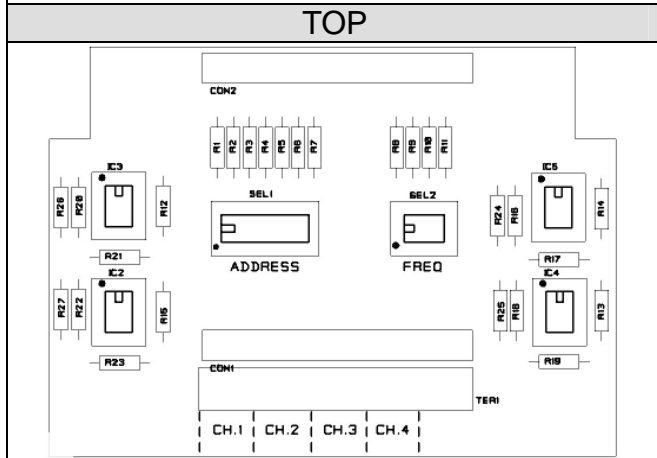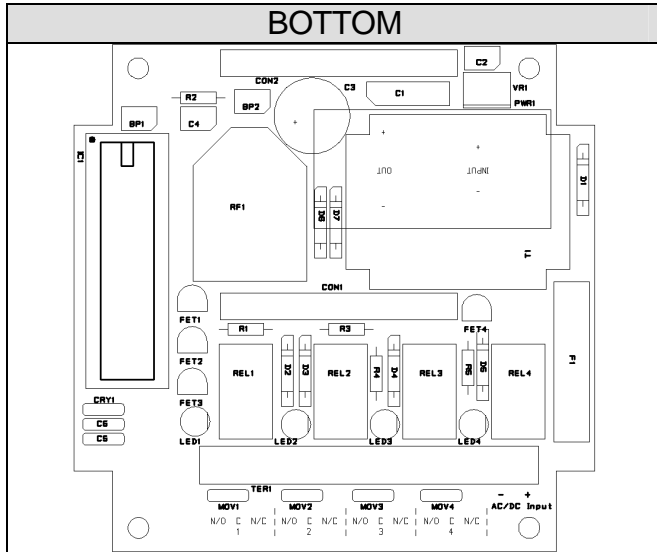

LED1 – LED4	Will be illuminated when the corresponding relay is energized
Inputs 1 thru 4	Four normally open dry contact inputs
REL1 thru REL4	Four SPDT output control relays

SPECIFICATIONS

DC Input	120 VAC, 16 W, 50/60 Hz
Relay Contacts	SPDT 5 amp @ 120 VAC or 50 VDC
Fuse Protected	1 amp
Transceiver Frequency	900 MHz Spread Spectrum
RF Output Power	100 mW
Transceiver Range	Approximately 2500 feet w/standard antenna
Transceiver Channels	7 Independent Network Frequencies
Antenna Connection	TNC Bulkhead
Enclosure	Polycarbonate / NEMA 4, 4x, 12 + 13
Operating Temperature	-40° F to +185° F

APPROVALS

United States (FCC)	MCQ-XBEEEXSC
Canada (IC)	1846A-XBEEEXSC

REPLACEMENT PARTS & ACCESSORIES

PC Board (Main)	44-4002-120VAC
Standard Antenna (Included):	
900MHz Portable Antenna (For distances up to 2500 feet*)	49-1103
Optional Antennas and Accessories:	
900MHz Omni Directional Antenna (For distances up to 2 miles*)	49-3101
900MHz 13dB Yagi Antenna Long Range Operation (For distances up to 4 miles*)	49-3102
Flex Coax Cable w/Connectors	49-4000-XX (XX = # of Feet)
Inline Lightning Arrestor	49-5002
* = Line of Sight	

LIMITED WARRANTY STATEMENT

BWI Eagle Inc. warrants the Air-Eagle Remote Control System, if properly used and installed, will be free from defects in material and workmanship for a period of 1 year after date of purchase. Said warranty to include the repair or replacement of defective equipment. This warranty does not cover damage due to external causes, including accident, problems with electrical power, usage not in accordance with product instructions, misuse, neglect, alteration, repair, improper installation, or improper testing. This limited warranty, and any implied warranties that may exist under state law, apply only to the original purchaser of the equipment, and last only for as long as such purchaser continues to own the equipment. This warranty replaces all other warranties, express or implied including, but not limited to, the implied warranties or merchantability and fitness for a particular purpose. BWI Eagle makes no express warranties beyond those stated here. BWI disclaims without limitation, implied warranties of merchantability and fitness for a particular purpose. Some jurisdictions do not allow the exclusion of implied warranties so this limitation may not apply to you. To obtain warranty service, contact BWI Eagle for a return material authorization. When returning equipment to BWI Eagle, the customer assumes the risk of damage or loss during shipping and is responsible for the shipping costs incurred.

DOCUMENT DATE: 22-Feb-12 / REV.1



105 Bonnie Drive
Butler, PA 16002
(724) 283-4681
Fax (724) 283-5939
www.bwieagle.com