



105 Bonnie Drive
Butler, PA 16002
724-283-4681
724-283-5939 (fax)
www.bwieagle.com

PRODUCT INFORMATION BULLETIN

AIR-EAGLE® XLT 900 MHz RF Transceiver MODEL 44-6050-2BFB-DC

DESCRIPTION

The AIR-EAGLE XLT RF TRANSCEIVER IS a dual pushbutton transmitter and a dual LED receiver in one compact unit. When used with a corresponding transceiver, this unit allows the user to transmit information and then receive, by visual LED status, a confirming signal back that the *operation was performed*. When used with a receiver having a confirmation feedback option, this unit will transmit information and then receive, by LED status, a confirming signal back that the *signal was received*. This system has an operating range of up to 2500 feet with the standard antenna, but can reach up to 4 miles with external antennas. It is user-programmable for up to seven network frequencies to allow multiple systems to operate simultaneously in the same area and utilizes spread-spectrum technology to provide the utmost security and reliability even in the noisiest RF environments.

APPROVALS

United States (FCC)	MCQ-XBEEEXSC
Canada (IC)	1846A-XBEEEXSC

INSTALLATION

DISCONNECT DC Power from all equipment before installation.

1. Mount the AIR-EAGLE XLT TRANSCEIVER in a convenient location.
2. Install antenna. The unit has an antenna connector located on the right side on the enclosure. Attach the supplied portable antenna to this connector.
3. Connect DC power and control to the proper terminals in your control circuit.

TERMINAL STRIP WIRING

1	Not Used	7	Not Used
2	Not Used	8	Not Used
3	Not Used	9	Not Used
4	Not Used	10	Not Used
5	Not Used	11	(-) 9-36 VDC INPUT
6	Not Used	12	(+) 9-36 VDC INPUT



Dimensions (with mounting plate) 6.3" L x 4.8" W x 2.3" H

CONTROLS & INDICATORS

Power/TX LED	Illuminates GREEN when power is applied to the unit. Illuminates RED while any button is depressed and unit is transmitting.
Pushbutton 1 and 2	Transmits individual button commands to the receiver
LED 1	Illuminates when Button #1 command has been performed
LED 2	Illuminates when Button #2 command has been performed

AIR-EAGLE® XLT

900 MHz RF Transceiver

MODEL 44-6050-2BFB-DC

FREQUENCY SET-UP

The unit is shipped from the factory with SEL1 switches in the open positions. The relays will operate as maintained momentary and unit is receiving commands on frequency one. If you wish to change the default frequency setting, follow the instructions on the table below.

- 1) Remove power from unit
- 2) Remove top cover.
- 3) Select desired address and/or network frequency using table below.
- 4) Reattach cover and apply power.
- 5) Programming is now complete.

OTHER

SEL1 (SW1-3)	Reserved for future use
-----------------	-------------------------

FREQUENCY SET-UP

	Network Address	SW4	SW5	SW6
SEL1 (SW4-6)	1	OPEN	OPEN	OPEN
	2	CLOSED	OPEN	OPEN
	3	OPEN	CLOSED	OPEN
	4	CLOSED	CLOSED	OPEN
	5	OPEN	OPEN	CLOSED
	6	CLOSED	OPEN	CLOSED
	7	OPEN	CLOSED	CLOSED

OTHER

SEL1 (SW7)	Reserved for future use
---------------	-------------------------

SPECIFICATIONS

DC Input	9 – 36 VDC @ 10 Watts
Relay Contacts	SPDT 5 amp @ 120 VAC or 50 VDC
Fuse Protected	1 amp
Transceiver Frequency	900 MHz Spread Spectrum
RF Output Power	100 mW
Transceiver Range	Approximately 2500 feet w/standard antenna
Transceiver Channels	7 Independent Network Frequencies
Antenna Connection	TNC Bulkhead
Enclosure	Polycarbonate / NEMA 4, 4x, 12 + 13
Operating Temperature	-40° F to +185° F

REPLACEMENT PARTS & ACCESSORIES

PC Board (Main)	44-6052-2BFB-DC
Standard Antenna (Included):	
900MHz Portable Antenna (For distances up to 2500 feet*)	49-1103
Optional Antennas and Accessories:	
900MHz Omni Directional Antenna (For distances up to 2 miles*)	49-3101
900MHz 13dB Yagi Antenna Long Range Operation (For distances up to 4 miles*)	49-3102
Flex Coax Cable w/Connectors	49-4000-XX (XX = # of Feet)
Inline Lightening Arrestor	49-5002
* = Line of Sight	

LIMITED WARRANTY STATEMENT

BWI Eagle Inc. warrants the Air-Eagle Remote Control System, if properly used and installed, will be free from defects in material and workmanship for a period of 1 year after date of purchase. Said warranty to include the repair or replacement of defective equipment. This warranty does not cover damage due to external causes, including accident, problems with electrical power, usage not in accordance with product instructions, misuse, neglect, alteration, repair, improper installation, or improper testing. This limited warranty, and any implied warranties that may exist under state law, apply only to the original purchaser of the equipment, and last only for as long as such purchaser continues to own the equipment. This warranty replaces all other warranties, express or implied including, but not limited to, the implied warranties or merchantability and fitness for a particular purpose. BWI Eagle makes no express warranties beyond those stated here. BWI disclaims without limitation, implied warranties of merchantability and fitness for a particular purpose. Some jurisdictions do not allow the exclusion of implied warranties so this limitation may not apply to you. To obtain warranty service, contact BWI Eagle for a return material authorization. When returning equipment to BWI Eagle, the customer assumes the risk of damage or loss during shipping and is responsible for the shipping costs incurred.

DOCUMENT DATE: 13-Feb-10 / REV.1



105 Bonnie Drive
Butler, PA 16002
(724) 283-4681
Fax (724) 283-5939
www.bwieagle.com