



105 Bonnie Drive
Butler, PA 16002
724-283-4681
724-283-5939 (fax)
www.bwieagle.com

PRODUCT INFORMATION BULLETIN

AIR-EAGLE[®] XLT PLUS High Power 900MHz RF Transmitter FOUR CONTACT INPUT MODEL 460-1400-DC

DESCRIPTION

The model 460-1400-DC, AIR-EAGLE XLT PLUS TX is a four contact input R.F. transmitter designed to transmit unique signals to an Air-Eagle XLT Plus Receiver which can be located up to 1 mile (*) away. This model comes equipped with a terminal strip for ease of interfacing with any external **dry contact input** devices such as tilt switches, flow switches, speed switches etc.

(*) – Longer distances can be obtained with external antennas

INSTALLATION

1. Mount the AIR-EAGLE XLT PLUS TRANSMITTER in a convenient location.
2. Install transmit control wiring to contact input terminal strip.
3. Attach rubber duck antenna or coax from external antenna to connector on side of enclosure.
4. Connect DC power and control to the proper terminals in your control circuit..

PC BOARD SET-UP INFORMATION


Make the following connections on the PC Board Terminal Strip:

DC INPUT TERMINAL STRIP (DC IN)			
Terminal 1	Positive (+) 9-36VDC INPUT		
Terminal 2	Negative (-) 9-36VDC INPUT		
INPUT 1 TERMINAL STRIP (INP1)			
Terminal 1	CH1 Dry Contact Input (+)		
Terminal 2	CH1 Dry Contact Input (Common)		
Terminal 3	CH2 Dry Contact Input (Common)		
Terminal 4	CH2 Dry Contact Input (+)		
I/O TERMINAL STRIP (TERM2)			
Terminal 1	CH3 Dry Contact Input (+)		
Terminal 2	CH3 Dry Contact Input (Common)		
Terminal 3	CH4 Dry Contact Input (+)		
Terminal 4	CH4 Dry Contact Input (Common)		
NETWORK SWITCH TERMINAL STRIP (NSW1)			
Terminal 1	Not Used On This Model		
Terminal 2	Not Used On This Model		
NETWORK SWITCH OPTIONS (SEL1)			
SEL 1 (SW1 & 2):	Network Address	SW1	SW2
USED TO SET NETWORK FREQUENCY	#1	OPEN	OPEN
	#2	CLOSED	OPEN
	#3	OPEN	CLOSED
	#4	CLOSED	CLOSED



CONTROLS & INDICATORS

CH1 LED	Red LED illuminates continuously while contact input #1 is closed and unit is transmitting.
POWER LED	Green LED illuminates continuously while power is applied
CH2 LED	Red LED illuminates continuously while contact input #2 is closed and unit is transmitting.
CH3 LED	Red LED illuminates continuously while contact input #3 is closed and unit is transmitting.
CH4 LED	Red LED illuminates continuously while contact input #4 is closed and unit is transmitting.

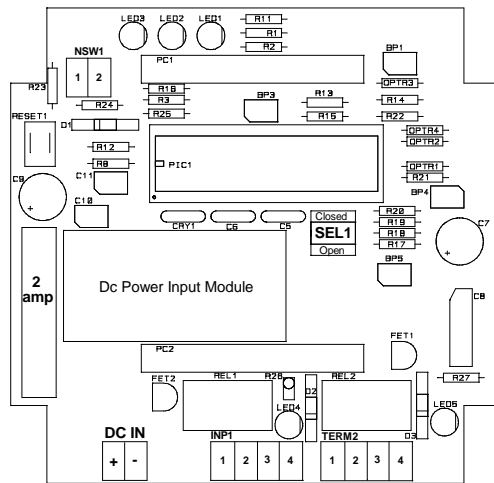


AIR-EAGLE® XLT PLUS

High Power 900MHz RF Transmitter
FOUR CONTACT INPUT

MODEL 460-1400-DC

DIMENSIONS

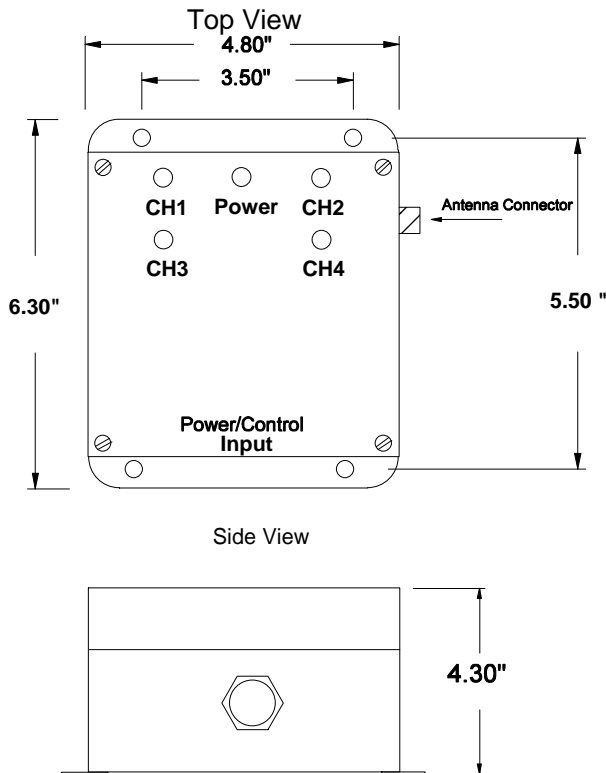

SPECIFICATIONS

Power Supply	9 – 36 VDC @ 10 Watts
Fuse Protected	2 amp
Transmitter Data	Four DRY Contact Inputs
Transmit Frequency	900MHz Spread Spectrum
RF Channels	Four independent network frequencies
RF Output Power	1W
Transmit Range	Approximately 1 Mile (Up to 25 miles with external antenna - see accessories)
Enclosure	ABS Plastic, NEMA 3, 3R, 4, 4X, 12, 13
Operating Temp	-40° F - +185° F

REPLACEMENT PARTS & ACCESSORIES

PC Board (Main)	460-1402
Standard Antenna (Included):	
900MHz Portable Antenna (For distances up to 1 Mile*)	49-1103
Optional Antennas and Accessories:	
900MHz Omni Directional Antenna (For distances up to 10 miles*)	49-3101
900MHz 13dB Yagi Antenna Long Range Operation (For distances up to 25 miles*)	49-3102
Flex Coax Cable w/Connectors	49-4000-XX (XX = # of Feet)
Inline Lightening Arrestor	49-5002
* = Line of Sight	

LIMITED WARRANTY STATEMENT

BWI Eagle Inc. warrants the Air-Eagle Remote Control System, if properly used and installed, will be free from defects in material and workmanship for a period of **1 year** after date of purchase. Said warranty to include the repair or replacement of defective equipment. This warranty does not cover damage due to external causes, including accident, problems with electrical power, usage not in accordance with product instructions, misuse, neglect, alteration, repair, improper installation, or improper testing. This limited warranty, and any implied warranties that may exist under state law, apply only to the original purchaser of the equipment, and last only for as long as such purchaser continues to own the equipment. This warranty replaces all other warranties, express or implied including, but not limited to, the implied warranties or merchantability and fitness for a particular purpose. BWI Eagle makes no express warranties beyond those stated here. BWI disclaims without limitation, implied warranties of merchantability and fitness for a particular purpose. Some jurisdictions do not allow the exclusion of implied warranties so this limitation may not apply to you. To obtain warranty service, contact BWI Eagle for a return material authorization. When returning equipment to BWI Eagle, the customer assumes the risk of damage or loss during shipping and is responsible for the shipping costs incurred.

DOCUMENT DATE: 31-Aug-10 / REV.0



105 Bonnie Drive
Butler, PA 16002
(724) 283-4681
Fax (724) 283-5939
www.bwieagle.com