

AIR-EAGLE SR Plus

38-21600-AC

2.4 GHz RF Receiver



Document Date: 9/20/2023
Product Rev: 3

BWI Eagle, Inc.
105 Bonnie Dr.
Butler, PA 16002
724-283-4681
724-283-5939 (fax)
www.bwieagle.com
sales@bwieagle.com



WARRANTY STATEMENT

BWI Eagle Inc. warrants the Air-Eagle Remote Control System, if properly used and installed, will be free from defects in material and workmanship for a period of **1 year** after date of purchase. Said warranty to include the repair or replacement of defective equipment. This warranty does not cover damage due to external causes, including accident, problems with electrical power, usage not in accordance with product instructions, misuse, neglect, alteration, repair, improper installation, or improper testing. This limited warranty, and any implied warranties that may exist under state law, apply only to the original purchaser of the equipment, and last only for as long as such purchaser continues to own the equipment. This warranty replaces all other warranties, express or implied including, but not limited to, the implied warranties or merchantability and fitness for a particular purpose. BWI Eagle makes no express warranties beyond those stated here. BWI disclaims without limitation, implied warranties of merchantability and fitness for a particular purpose. Some jurisdictions do not allow the exclusion of implied warranties so this limitation may not apply to you. To obtain warranty service, contact BWI Eagle for a return material authorization. When returning equipment to BWI Eagle, the customer assumes the risk of damage or loss during shipping and is responsible for the shipping costs incurred.


SIGNAL RANGE

Max range statements are estimates based on a clear line of sight with few interferences. Actual range will vary based on transmitting power, orientation of transmitter and receiver, height of transmitting and receiving antennas, weather conditions, electronic interference, terrain, and physical obstacles, including but not limited to; walls, building structures, trees (foliage), metal objects, and landscape (hills, mountains).



WIRELESS STOP, ASTOP, and E-STOP SYSTEMS

Wireless E-STOP systems should never be considered a primary life-saving device. At least one hard-wired switch must be available in the event the wireless system is not operational. Failure to comply may result in serious injury or death to personnel and damage to equipment.

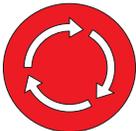

Wireless STOP and ASTOP transmitters are not failsafe emergency stop controls. They are NOT to be used as a life-saving device. They are designed for wireless control of equipment or vehicle remote operation. Failure to use as intended may result in serious injury or death to personnel and damage to equipment.



38-21600-AC



INTRODUCTION

The Air-Eagle SR Plus is an RF system designed for short range wireless remote control of electrical apparatus in a variety of industrial applications. Systems can consist of any number of receivers and handheld or stationary transmitters working together to create a short range radio frequency system that operates hazardous or hard-to-reach equipment from safe, convenient locations.

Eight user selectable frequencies allow multiple systems to be used in the same area without interference.

This receiver is equipped with sixteen independent relays that can switch 5 amps @ 120VAC or 30VDC. The relays are user programmable for momentary or toggle/latching operation and can be directly interfaced with the customer's equipment or P.L.C. It is capable of receiving remote signals from an Air-Eagle SR Plus transmitter up to 600 feet away. Longer ranges can be achieved with external antennas (See ACCESSORIES section). The Air-Eagle SR Plus receiver utilizes spread-spectrum technology and provides the utmost in security and reliability.

INSTALLATION

1. **DISCONNECT** power from all equipment before proceeding with installation.
2. Mount the receiver in a convenient location.
3. Install relay control wiring to the terminal strip.
4. Attach rubber duck antenna or coax from external antenna to connector on side of enclosure.
5. Connect supplied power input cable to external power source.

APPROVALS

| | |
|---------------------|-----------------------|
| United States (FCC) | MCQ-XBEE3 |
| Canada (IC) | 1846A-XBEE3 |
| Europe (CE) | ETSI |
| Australia | RCM |
| Brazil | ANATEL 06329-18-01209 |

38-21600-AC

TERMINAL STRIP WIRING

| Bottom Board Relay Outputs | | | | | |
|----------------------------|---------------|-------------|---------------|-------------|---------------|
| Terminal 1 | N/O Relay #1 | Terminal 10 | N/O Relay #4 | Terminal 19 | N/O Relay #7 |
| Terminal 2 | C Relay #1 | Terminal 11 | C Relay #4 | Terminal 20 | C Relay #7 |
| Terminal 3 | N/C Relay #1 | Terminal 12 | N/C Relay #4 | Terminal 21 | N/C Relay #7 |
| Terminal 4 | N/O Relay #2 | Terminal 13 | N/O Relay #5 | Terminal 22 | N/O Relay #8 |
| Terminal 5 | C Relay #2 | Terminal 14 | C Relay #5 | Terminal 23 | C Relay #8 |
| Terminal 6 | N/C Relay #2 | Terminal 15 | N/C Relay #5 | Terminal 24 | N/C Relay #8 |
| Terminal 7 | N/O Relay #3 | Terminal 16 | N/O Relay #6 | | |
| Terminal 8 | C Relay #3 | Terminal 17 | C Relay #6 | | |
| Terminal 9 | N/C Relay #3 | Terminal 18 | N/C Relay #6 | | |
| Top Board Relay Outputs | | | | | |
| Terminal 1 | N/O Relay #9 | Terminal 10 | N/O Relay #12 | Terminal 19 | N/O Relay #15 |
| Terminal 2 | C Relay #9 | Terminal 11 | C Relay #12 | Terminal 20 | C Relay #15 |
| Terminal 3 | N/C Relay #9 | Terminal 12 | N/C Relay #12 | Terminal 21 | N/C Relay #15 |
| Terminal 4 | N/O Relay #10 | Terminal 13 | N/O Relay #13 | Terminal 22 | N/O Relay #16 |
| Terminal 5 | C Relay #10 | Terminal 14 | C Relay #13 | Terminal 23 | C Relay #16 |
| Terminal 6 | N/C Relay #10 | Terminal 15 | N/C Relay #13 | Terminal 24 | N/C Relay #16 |
| Terminal 7 | N/O Relay #11 | Terminal 16 | N/O Relay #14 | | |
| Terminal 8 | C Relay #11 | Terminal 17 | C Relay #14 | | |
| Terminal 9 | N/C Relay #11 | Terminal 18 | N/C Relay #14 | | |
| Power Inputs | | | | | |
| Terminal 1 | 100-250 VAC | Terminal 2 | 100-250 VAC | | |

38-21600-AC

RELAY OPERATION

Relays energize and de-energize based on commands received from the transmitter. See below for relay mode configuration for this receiver.

| Transmitter Button Pressed or Input Activated | Receiver Relay Action |
|--|--|
| 1 | Relay 1 Energizes, Maintained Momentary |
| 2 | Relay 2 Energizes, Maintained Momentary |
| 3 | Relay 3 Energizes, Maintained Momentary |
| 4 | Relay 4 Energizes, Maintained Momentary |
| 5 | Relay 5 Energizes, Maintained Momentary |
| 6 | Relay 6 Energizes, Maintained Momentary |
| 7 | Relay 7 Energizes, Maintained Momentary |
| 8 | Relay 8 Energizes, Maintained Momentary |
| 9 | Relay 9 Energizes, Maintained Momentary |
| 10 | Relay 10 Energizes, Maintained Momentary |
| 11 | Relay 11 Energizes, Maintained Momentary |
| 12 | Relay 12 Energizes, Maintained Momentary |
| 13 | Relay 13 Energizes, Maintained Momentary |
| 14 | Relay 14 Energizes, Maintained Momentary |
| 15 | Relay 15 Energizes, Maintained Momentary |
| 16 | Relay 16 Energizes, Maintained Momentary |

38-21600-AC

RELAY, FEEDBACK, & FREQUENCY OPTIONS



The unit is shipped from the factory with SEL1 switches in the open positions. Relays operate as maintained momentary, vibrating feedback is off, and unit is receiving commands on frequency 1. To change default settings, follow the instructions below:

1. ***IMPORTANT***
Disconnect power from unit.
2. Remove top cover.
3. Select desired options using the table.
4. Reattach cover.
5. Reconnect power to unit.
6. Programming is complete.

| RELAY CONFIGURATION | | | |
|--|--------------------------------------|------------------------------|--------|
| SEL1 SW# | OPEN (default) | CLOSED | |
| SW1 | Relays #1 - #8 maintained momentary | Relays #1 - #8 toggle/latch | |
| SW2 | Relays #9 - #16 maintained momentary | Relays #9 - #16 toggle/latch | |
| <p><u>Maintained Momentary</u> – Relay mimics button or input – when pressed or closed, relay will be energized; when released, relay de-energizes.</p> <p><u>Toggle Latch</u> – Relay changes and holds its state each time the corresponding button or input is pressed or closed.</p> | | | |
| FEEDBACK OPTIONS | | | |
| SEL1 SW# | OPEN (default) | CLOSED | |
| SW3 | Vibrating Feedback OFF | Vibrating Feedback ON | |
| FREQUENCY OPTIONS | | | |
| NETWORK FREQUENCY | SW5 | SW6 | SW7 |
| 1 (default) | OPEN | OPEN | OPEN |
| 2 | CLOSED | OPEN | OPEN |
| 3 | OPEN | CLOSED | OPEN |
| 4 | CLOSED | CLOSED | OPEN |
| 5 | OPEN | OPEN | CLOSED |
| 6 | CLOSED | OPEN | CLOSED |
| 7 | OPEN | CLOSED | CLOSED |
| 8 | CLOSED | CLOSED | CLOSED |
| Note: SW4 is not used on this model. Leave in the OPEN position. | | | |

38-21600-AC

CONTROLS & INDICATORS

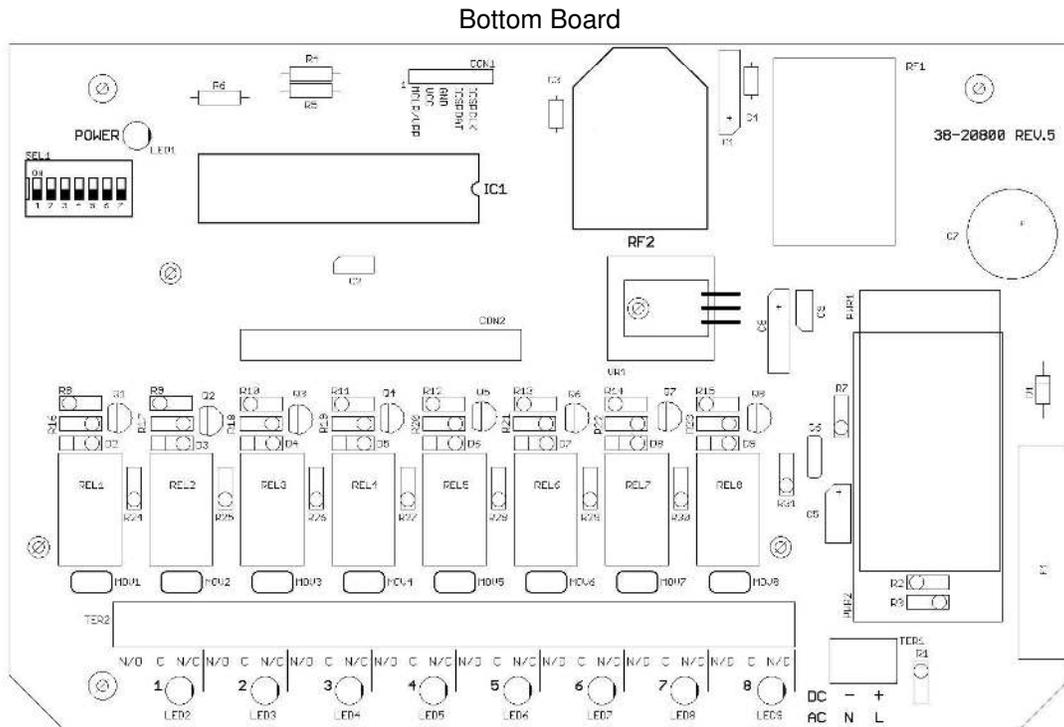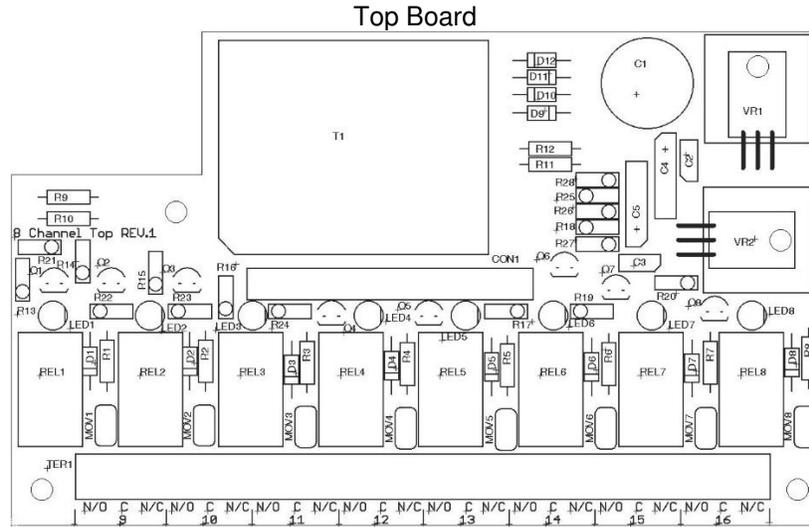

| | |
|---------------------|--|
| POWER LED | Dual color LED illuminates red while unit is booting up, changes to green when boot-up is successful and unit is ready to operate. If this LED fails to turn green, power unit off for 15-20 seconds, then reapply power. |
| RELAY LEDs | Illuminate green while relay is energized |
| DIP SWITCHES | Switches used to set user-selectable options and network frequency |
| EPROM CHIP | Socket mounted integrated circuit that holds unit's program |
| RF MODULE | RF Module that transmits/receives data |

38-21600-AC

SPECIFICATIONS



| | |
|---|--|
| Power Supply | 100-250 VAC, 5W, 50/60 Hz |
| Relay Contacts | SPDT 5 amp @ 120VAC or 30VDC per channel |
| Fuse Protected | 1 amp |
| Receiver Frequency | 2.4 GHz Spread Spectrum |
| Receiver Range | Up to 600 feet * |
| RF Networks | Eight Independent Network Frequencies |
| Operating Temperature | -40° F to +185° F |
| Enclosure | Hinged fiberglass with window (NEMA 4, IP66) |
| <p>*Note: Max range statements are estimates based on a clear line of sight with few interferences. Actual range will vary based on transmitting power, orientation of transmitter and receiver, height of transmitting and receiving antennas, weather conditions, electronic interference, terrain, and physical obstacles, including but not limited to; walls, building structures, trees (foliage), metal objects, and landscape (hills, mountains).</p> | |

ACCESSORIES

| | |
|---|---------------------------------------|
| STANDARD ANTENNA (INCLUDED) | |
| 2.4GHz TNC Portable "Rubber Duck" Antenna | 49-1201 |
| MOBILE/BASE ANTENNAS (OPTIONAL) Used to help achieve max range in non-line-of-sight and line-of-sight applications. Contact BWI Eagle for recommendations. | |
| 2.4GHz Thru-Hole/Bracket Mount Mobile Antenna | 49-2201 |
| 2.4GHz Magnet Mount Mobile Antenna | 49-2202 |
| 2.4GHz Omni Directional Base Antenna | 49-3201 |
| 2.4GHz Yagi Directional Base Antenna | 49-3202 |
| HIGH QUALITY COAX CABLE Used to connect external antennas to control unit. | |
| Flex Coax Cable w/Connectors (Available in 5', 15', 25', 30', 40', 60', 80', and 100' lengths) | 49-4000-XX (XX = length in feet) |
| BULKHEAD EXTENSION Used to provide an external antenna connection when mounting control unit inside another enclosure. | |
| TNC Male to TNC Bulkhead Cable Assembly (Available in 2', 4', and 7' lengths) | 49-5004-X-ISO (X = length in feet) |

38-21600-AC

DIMENSIONS

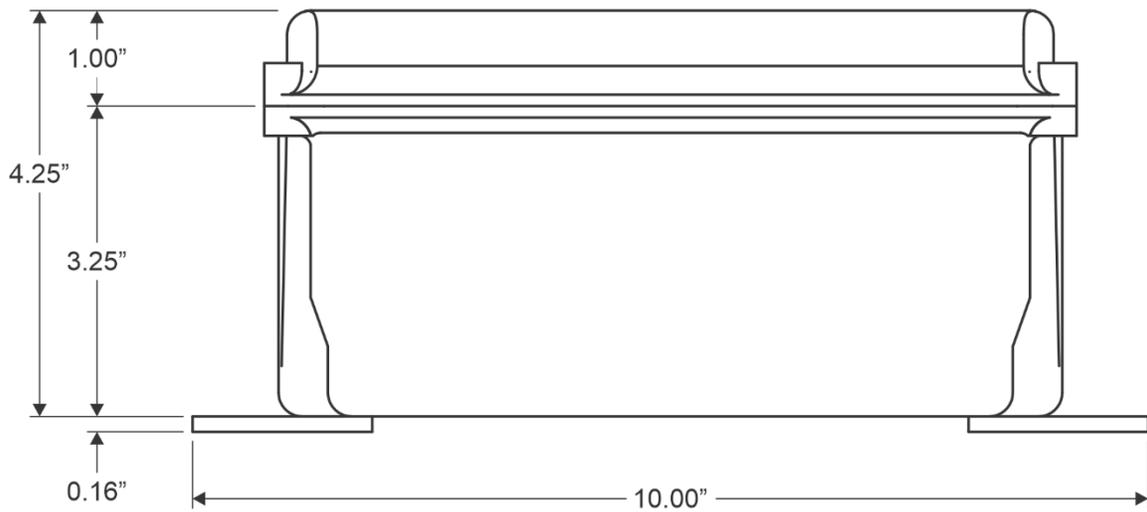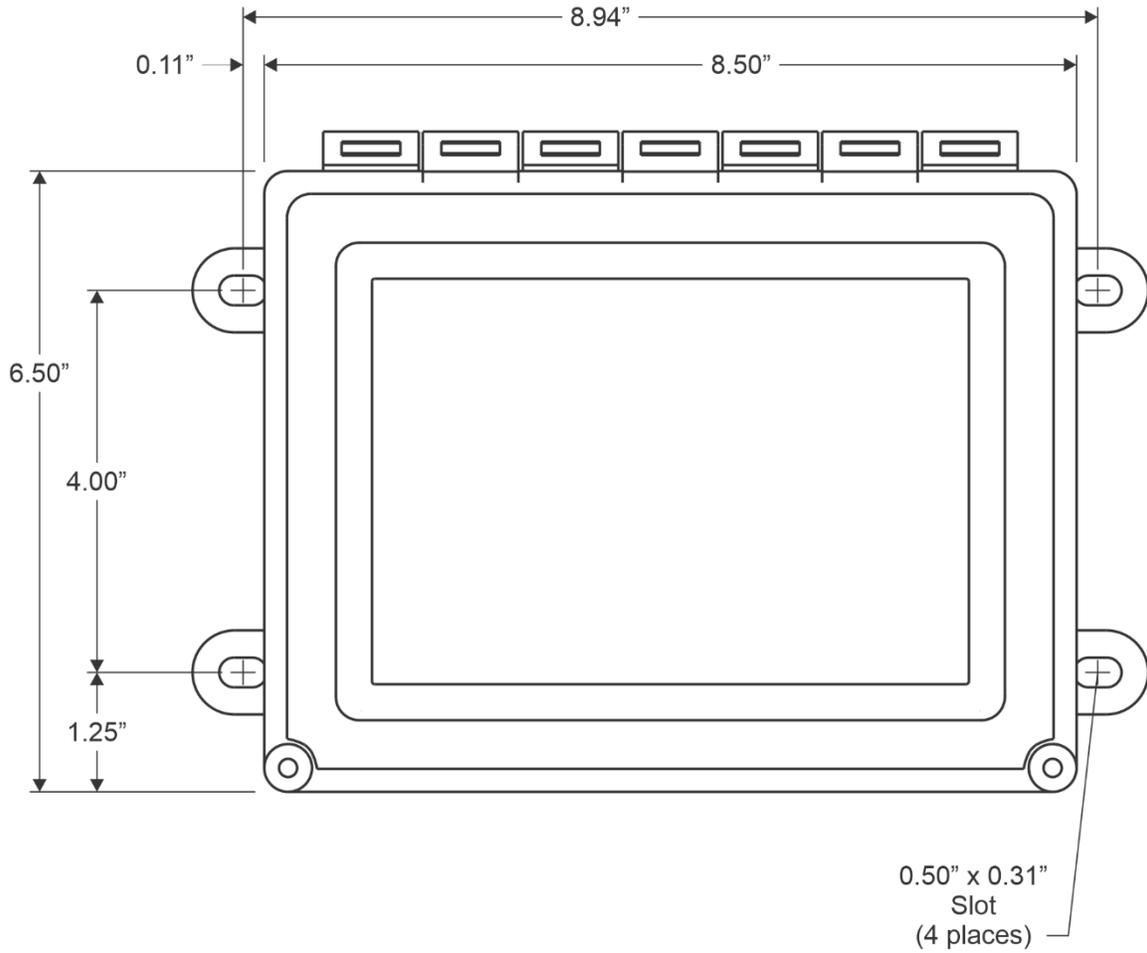





105 Bonnie Drive
Butler, PA 16002
724-283-4681
724-283-5939 (fax)
www.bwieagle.com


RELAY OUTPUT WIRING

16-Relay Receiver

Receiver outputs are dry relay contacts, like an SPDT switch. When the relay is in a de-energized state, the N/C (normally closed) contact is connected to C (common). When the relay is energized the N/O (normally open) contact is connected to C (common).

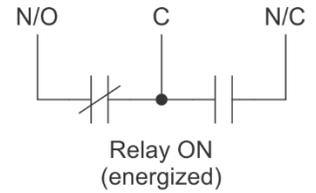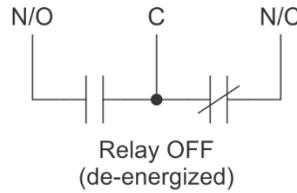

Normally Open Application with Externally Supplied Voltage

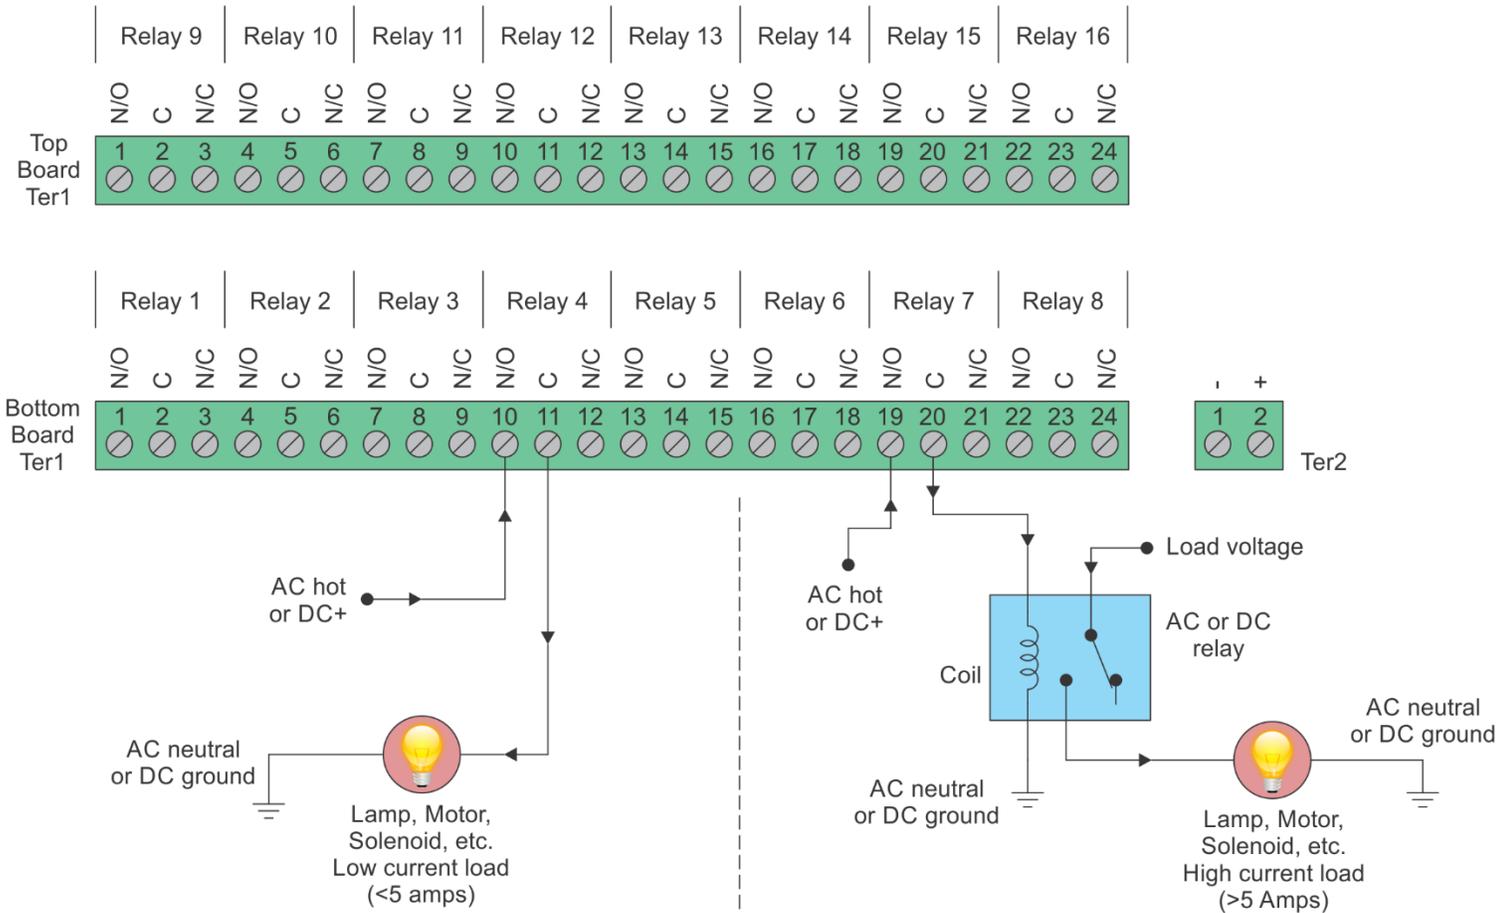

Internal Relay - Loads Less Than 5 Amps

Loads up to 5 Amps may be wired directly to the internal relays. Wiring to the N/O contact will cause the load to turn on when the relay is energized (the load is on when the relay is on). Wiring to the N/C contact will cause the load to turn on when the relay is de-energized (the load is on when the relay is off). AC or DC voltages can be switched through the relay.

External Relay - Loads Over 5 Amps

Loads over 5 Amps must use an external high current relay. Diagram shows how to turn on the relay using the lower current internal relay of the receiver. AC or DC voltages can be switched through the relay. Note: A protection diode for DC coils or an MOV for AC coils is recommended to reduce inductive EMI noise.

Wiring configurations shown here are examples. The wiring for your application may differ.
Call BWI Eagle for assistance or consult an electrician.