

# AIR-EAGLE XLT PLUS

## 461-HH-4

### 900 MHz RF Transmitter



Document Date: 11/11/2022  
Product Rev: 11

BWI Eagle, Inc.  
105 Bonnie Dr.  
Butler, PA 16002  
724-283-4681  
724-283-5939 (fax)  
[www.bwieagle.com](http://www.bwieagle.com)  
[sales@bwieagle.com](mailto:sales@bwieagle.com)



**WARRANTY STATEMENT**

BWI Eagle Inc. warrants the Air-Eagle Remote Control System, if properly used and installed, will be free from defects in material and workmanship for a period of **1 year** after date of purchase. Said warranty to include the repair or replacement of defective equipment. This warranty does not cover damage due to external causes, including accident, problems with electrical power, usage not in accordance with product instructions, misuse, neglect, alteration, repair, improper installation, or improper testing. This limited warranty, and any implied warranties that may exist under state law, apply only to the original purchaser of the equipment, and last only for as long as such purchaser continues to own the equipment. This warranty replaces all other warranties, express or implied including, but not limited to, the implied warranties or merchantability and fitness for a particular purpose. BWI Eagle makes no express warranties beyond those stated here. BWI disclaims without limitation, implied warranties of merchantability and fitness for a particular purpose. Some jurisdictions do not allow the exclusion of implied warranties so this limitation may not apply to you. To obtain warranty service, contact BWI Eagle for a return material authorization. When returning equipment to BWI Eagle, the customer assumes the risk of damage or loss during shipping and is responsible for the shipping costs incurred.


**SIGNAL RANGE**

Max range statements are estimates based on a clear line of sight with few interferences. Actual range will vary based on transmitting power, orientation of transmitter and receiver, height of transmitting and receiving antennas, weather conditions, electronic interference, terrain, and physical obstacles, including but not limited to; walls, building structures, trees (foliage), metal objects, and landscape (hills, mountains).



**WIRELESS STOP, ASTOP, and E-STOP SYSTEMS**

Wireless E-STOP systems should never be considered a primary life-saving device. At least one hard-wired switch must be available in the event the wireless system is not operational. Failure to comply may result in serious injury or death to personnel and damage to equipment.

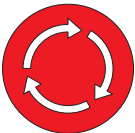

Wireless STOP and ASTOP transmitters are not failsafe emergency stop controls. They are NOT to be used as a life-saving device. They are designed for wireless control of equipment or vehicle remote operation. Failure to use as intended may result in serious injury or death to personnel and damage to equipment.



# 461P-HH-4-003-CL



## INTRODUCTION

The Air-Eagle XLT Plus is an RF system designed for extra-long range wireless remote control of electrical apparatus in a variety of industrial applications. Systems can consist of any number of receivers and handheld or contact input transmitters working together to create an extra-long-range radio frequency system that operates hazardous or hard-to-reach equipment from safe, convenient locations.

Eight user selectable frequencies allow multiple systems to be used in the same area without interference.

This handheld transmitter is equipped to send four unique digital commands to an Air-Eagle XLT Plus receiver located up to 5000 feet away. It will automatically go into “sleep” mode when not in use to dramatically extend battery life. The Air-Eagle XLT Plus transmitter utilizes spread-spectrum technology and provides the utmost in security and reliability.

## INITIAL OPERATION SET-UP

This transmitter comes ready to operate, with batteries installed, and set to factory default settings. No setup is necessary. To change frequency setting see FREQUENCY PROGRAMMING section.

## APPROVALS

United States (FCC)	MCQ-XBPSX
Canada (IC)	1846A-XBPSX
Australia	RCM
Brazil	ANATEL: 05774-16-01209

## 461P-HH-4-003-CL

### CONTROLS & INDICATORS

<b>TX LED</b>	LED illuminates continuously while button is pressed and unit is transmitting. When this LED blinks briefly following a transmission, the battery needs to be replaced. *
<b>Pushbuttons 1-4</b>	Transmits an individual RF code to the receiver.
<p>*Note: The low battery notification signals have been improved to provide more noticeable indications and to safely disable communications BEFORE a low battery condition can corrupt internal memory causing device failure. When a low battery is first detected, the TX LED will blink several times after all buttons are released. If it is possible to replace the batteries now, please do so. If not, the operator has approximately 15 more button activations. During this time, when a button is pressed and held, the TX LED will blink SLOWLY. The slow blinking will continue several more times after all buttons are released. Transmissions are still being sent to the receiver during this time. When a button is pressed and the TX LED is RAPIDLY blinking, the RF output is disabled, and no signal will reach the receiver. The batteries MUST NOW BE REPLACED to resume normal functions.</p>	

### SPECIFICATIONS

<b>Keypad</b>	Durable Sealed Membrane Keypad – Eliminates Dust, Dirt and Moisture Failures	
<b>Enclosure</b>	ABS UL94 HB	Enclosure with ring is rated IP54 (Not Waterproof)
<b>Protective Ring</b>	SEBS (TPE)	
<b>Power Requirements</b>	3.0 VDC	
<b>Battery Type</b>	(2) 1.5V lithium each, size AAA, to equal 3.0VDC nominal. For best performance use only Energizer Brand Lithium Batteries. *	
<b>Battery Life (Active Usage)</b>	Up to 3 months	
<b>Battery Life (Sleep Mode)</b>	Up to 1 Year	
<b>Transmit Frequency</b>	900MHz Spread Spectrum	
<b>RF Networks</b>	Eight Independent Network Frequencies	
<b>RF Output Power</b>	1 W	
<b>Max Transmit Range</b>	Up to 5000 Feet	
<b>Operating Temperature</b>	-40° F to +185° F	
<p>*Note: Current frequency setting is maintained in flash memory during battery replacement. No reprogramming of frequency setting is necessary.</p>		
<p>**Note: Max range statements are estimates based on a clear line of sight with few interferences. Actual range will vary based on transmitting power, orientation of transmitter and receiver, height of transmitting and receiving antennas, weather conditions, electronic interference, terrain, and physical obstacles, including but not limited to; walls, building structures, trees (foliage), metal objects, and landscape (hills, mountains).</p>		

## FREQUENCY PROGRAMMING

Read instructions completely before beginning programming procedure.

Transmitters are shipped from the factory set to Frequency 1 by default. The frequency can be changed at any time by following the procedure below. Once changed, it is recommended to label the transmitter with the selected frequency number.

\*Note: Current frequency setting is maintained in flash memory during battery replacement. No reprogramming of frequency setting is necessary after battery change.

### To Check Current Frequency:

1. Press Buttons 3 & 4 simultaneously for approximately 4 seconds until the TX LED illuminates RED.
2. Release all buttons. Watch while TX LED begins to blink.
3. The TX LED will blink RED one, two, three, or four times for frequencies 1, 2, 3, or 4, or will blink GREEN one, two, three, or four times for frequencies 5, 6, 7, or 8. See table below for clarification.

Operating Frequency:	TX LED Flashes
Frequency 1	1 RED flash
Frequency 2	2 RED flashes
Frequency 3	3 RED flashes
Frequency 4	4 RED flashes
Frequency 5	1 GREEN flash
Frequency 6	2 GREEN flashes
Frequency 7	3 GREEN flashes
Frequency 8	4 GREEN flashes

### To Select Frequency 1 - 4:

1. Press Buttons 3 & 4 simultaneously for approximately 4 seconds until the TX LED illuminates RED.
2. Release Buttons 3 & 4. While TX LED is still RED press Button 1 to select Frequency 1, Button 2 to select Frequency 2, etc.
3. The TX LED will blink to confirm the frequency selection has been accepted. It will blink RED once to confirm Frequency 1, blink twice to confirm Frequency 2, etc.

Note - If the TX LED goes out before a frequency is selected, the setting will not change, and the LED will blink corresponding to the current frequency setting. To change the frequency, start again at step 1.

<< Continued >>

## 461P-HH-4-003-CL

### FREQUENCY PROGRAMMING (Continued)

#### To Select Frequency 5 - 8:

1. Press Buttons 3 & 4 simultaneously for approximately 7 seconds until the TX LED illuminates GREEN.
2. Release Buttons 3 & 4. While TX LED is still GREEN press Button 1 to select Frequency 5, Button 2 to select Frequency 6, etc.
3. The TX LED will blink to confirm the frequency selection has been accepted. It will blink GREEN once to confirm Frequency 5, blink twice to confirm Frequency 6, etc.

Note - If the TX LED goes out before a frequency is selected, the setting will not change, and the LED will blink corresponding to the current frequency setting. To change the frequency, start again at step 1.

Programming is now complete. Repeat the above procedure to change the frequency at any time.

### DIMENSIONS

