



238 Pillow Street
Butler, PA 16001
724-283-4681
724-283-5939 (fax)
www.bwieagle.com

PRODUCT INFORMATION BULLETIN


DELAY TIMER OFF Delay Series MODELS 22-6500, 22-6600

INSTALLATION

1. DISCONNECT AC power before proceeding with installation
2. Mount the Eagle Delay Timer in an existing control panel or other suitable protective enclosure.
3. Make the following connections on the socket:


TERMINAL	CONNECTION
1 - 2	Control Input (Dry Contacts or Switch)
3 - 4	No Connection
5 - 6	120 VAC Input
7	Relay N/C (1)
8	Relay Common (1)
9	Relay N/O (1)
10	Relay N/C (2)
11	Relay Common (2)
12	Relay N/O (2)

CONTROLS AND INDICATORS

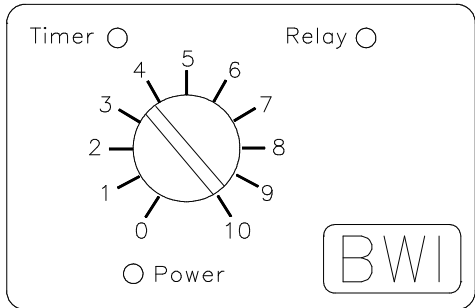

- POWER LED** - Indicates that the 120 VAC is applied to unit.
- TIMER LED** - When illuminated, indicates that the timing cycle is active.
- RELAY LED** - When illuminated, indicates the control relay is energized.

DIMENSIONS

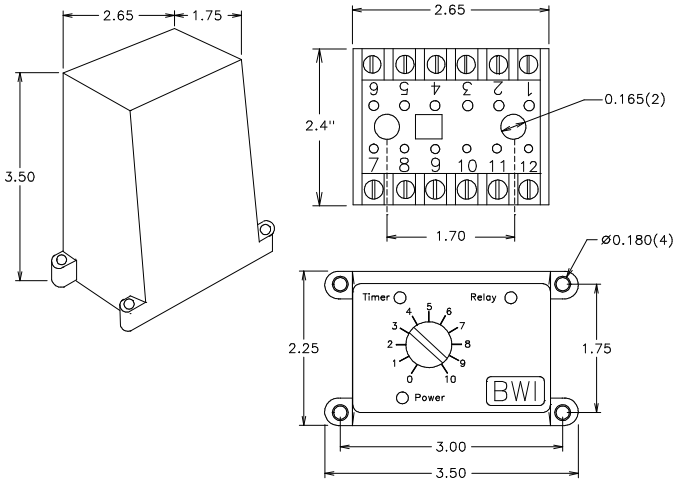

OPERATION

Model 22-6500

Once AC power is applied to the unit, the power LED will illuminate. When the normally open contacts installed on Terminal Nos. 1 & 2 close, the relay will energize and the "TIMER" LED will illuminate. As long as the input contacts stay closed, the timer will continue until it has reached the end of the timing cycle (0 - 50 seconds). At this time, the relay will de-energize. This cycle will start over when the input contacts have opened and then re-closed. If during the timer cycle, the input should open, the relay will immediately de-energize. **NOTE:** The timer adjustment scale is shown as 0 - 10. This represents 0 - 100% of the maximum timing cycle. Example: 0 = 0 seconds; 5 = 25 seconds; 10 = 50 seconds.

Model 22-6600

Once AC power is applied to the unit, the power LED will illuminate. When the normally open contacts installed on Terminal Nos. 1 & 2 toggle (close and then reopen), the relay will energize and the "timer" LED will illuminate. The timer will continue until it has reached the end of the timing cycle (0 - 500 seconds). At this time, the relay will de-energize. This cycle will start over when the input contacts have recycled. **NOTE:** The timer adjustment scale is shown as 0 - 10. This represents 0 - 100% of the maximum timing cycle. Example: 0 = 0 seconds; 5 = 250 seconds; 10 = 500 seconds.

DELAY TIMER

OFF Delay Series

MODELS 22-6500, 22-6600

SPECIFICATIONS & REPLACEMENT PARTS

Model 22-6500 Specifications

AC Input	120 VAC 8 W
Fuse Protected	1 amp
Timer Range	Off Delay (0 - 50 Seconds)
Relay Contacts	DPDT 3 amp @ 120 VAC
Control Input	Dry Contacts or Switch
Enclosure	ABS Plastic

Replacement Parts

Control Module	22-6502
Socket	22-8003

Model 22-6600 Specifications

AC Input	120 VAC 8 W
Fuse Protected	1 amp
Timer Range	Off Delay (0 - 500 Seconds)
Relay Contacts	DPDT 3 amp @ 120 VAC
Control Input	Dry Contacts or Switch
Enclosure	ABS Plastic

Replacement Parts

Control Module	22-6602
Socket	22-8003

DOCUMENT DATE: 11-Aug-04



238 Pillow Street
Butler, PA 16001
(724) 283-4681
Fax (724) 283-5939
www.bwieagle.com